


SPECIAL SENSOR INSTALLATION INSTRUCTIONS

Materials Required for Installation:

1. 3/4" PVC Pipe (Not included with Kit. Length of pipe should be suitable for your application).

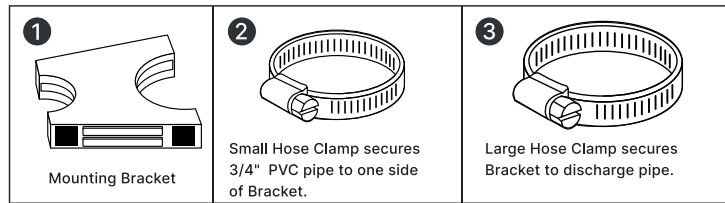


2. Installation Kit, including:

- Mounting Bracket
- Small (1.5") Stainless Steel Hose Clamp
- Large (2.25") Stainless Steel Hose Clamp

Step 1.

The first step is to pass the small Hose Clamp through one side of the Bracket, and pass the large Hose Clamp through the other side of the Bracket as shown below.

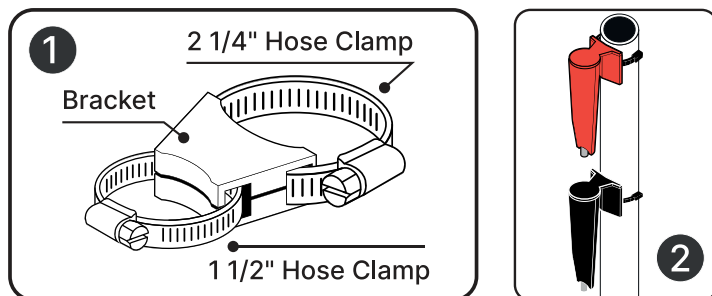


Step 2.

Next, strap the 2 HC6000 sensors to the 3/4" PVC pipe with the tiewraps provided, positioning Red sensor to set the level where the pump is to turn on, the Black sensor positioned where the pump is to turn off.


Step 3.

Next, position the 3/4" PVC pipe between the small hose clamp and the Bracket. Tighten the hose clamp until the 3/4" PVC pipe is held snugly against the Bracket.

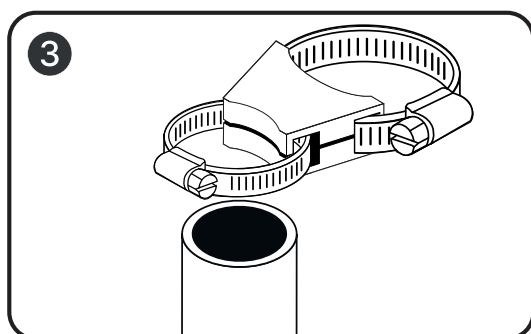


Step 4.

Then, position the Bracket at the desired height in the pit, wrap the large hose clamp around the discharge pipe, and tighten it until the Bracket is held firmly in place against the discharge pipe.

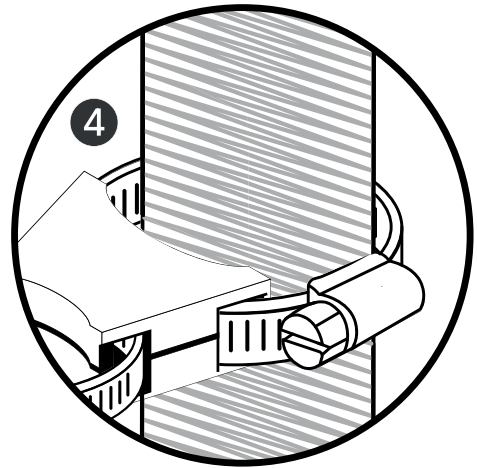


After completing Step 4 above, your setup should look something like the picture below.

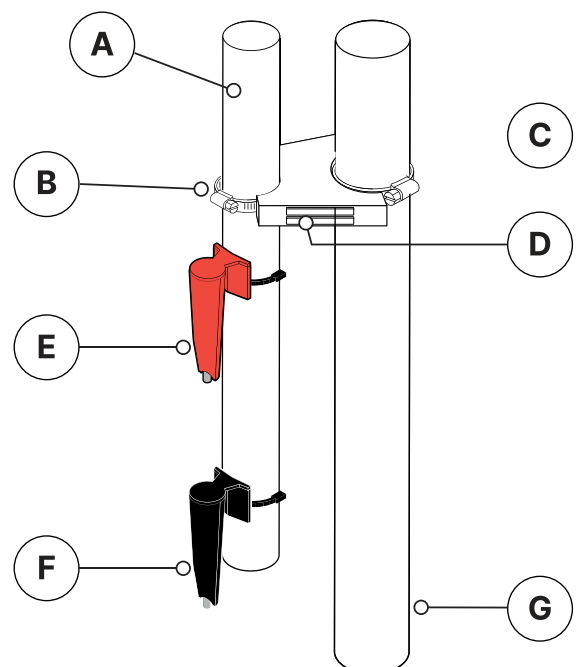


Installation Key

- | | |
|----------------------|-------------------|
| A. 3/4" PVC Pipe | D. Bracket |
| B. 1 1/2" Hose Clamp | E. Red Sensor |
| C. 2 1/4" Hose Clamp | F. Black Sensor |
| | G. Discharge Pipe |

What happens in pits with Standard installation and high iron or mineral content

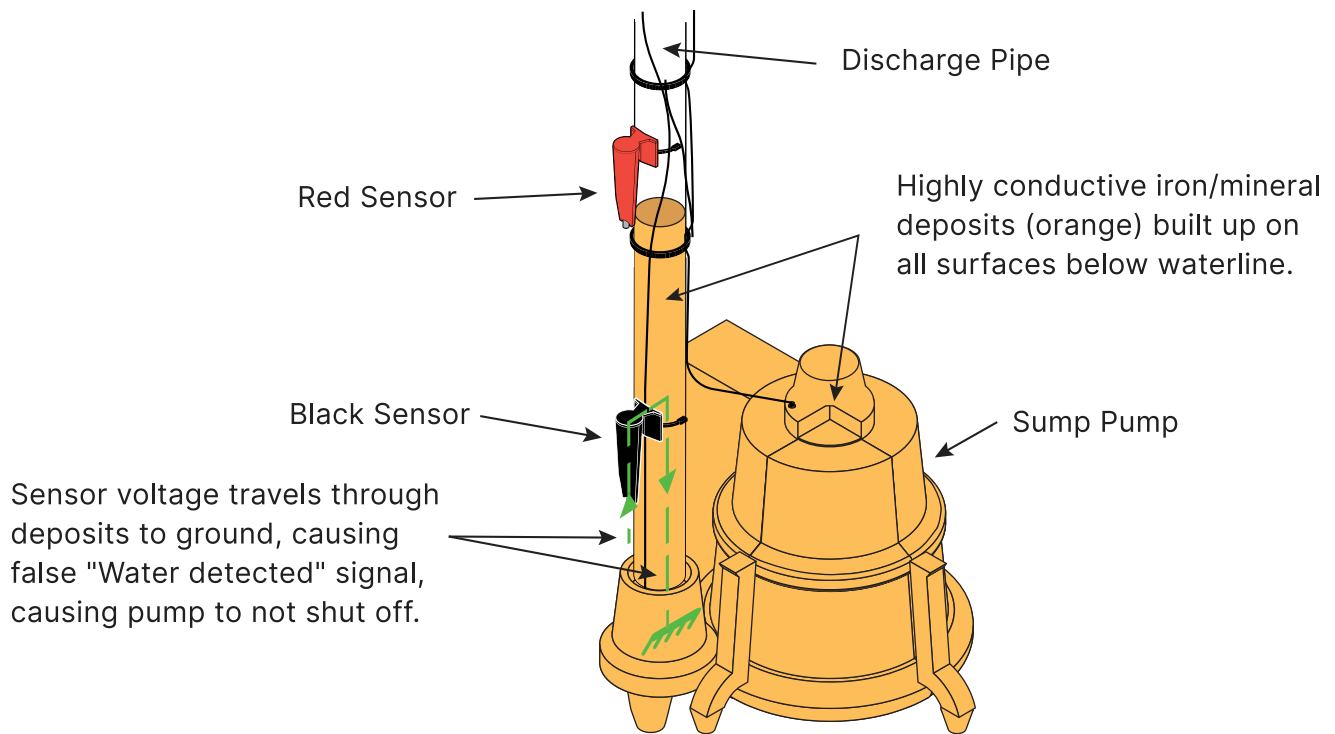

What happens in pits with Special installation and high iron or mineral content

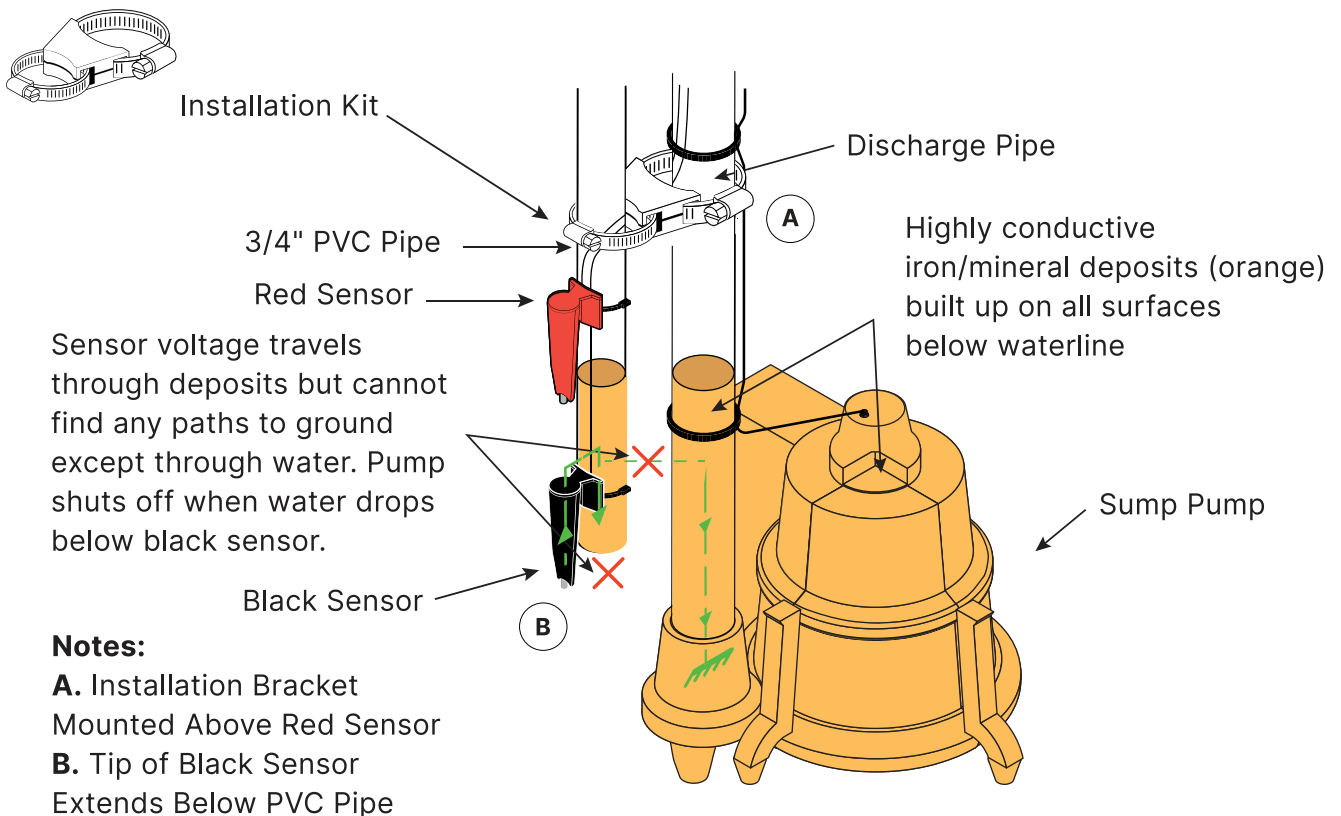

Questions or Comments Contact Us At:

www.hydrocheckproducts.com or

info@hydrocheckproducts.com or

877-225-2124